

functional area

frame divider


hole allocation

wheel base (shallow depth)


Hole Allocations: 57 holes for 59" tall frames and 42 holes for a 44" tall frame
(2 additional forward facing holes for anchor points)

Important note:
The frames are fixed and cannot be changed.

The rear module can be installed separately without the front module.
The front module can only be installed when the rear module is present.

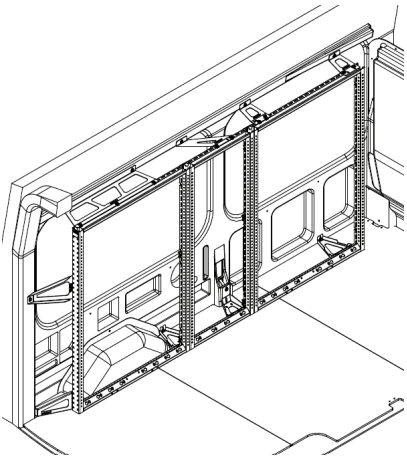

Rear door

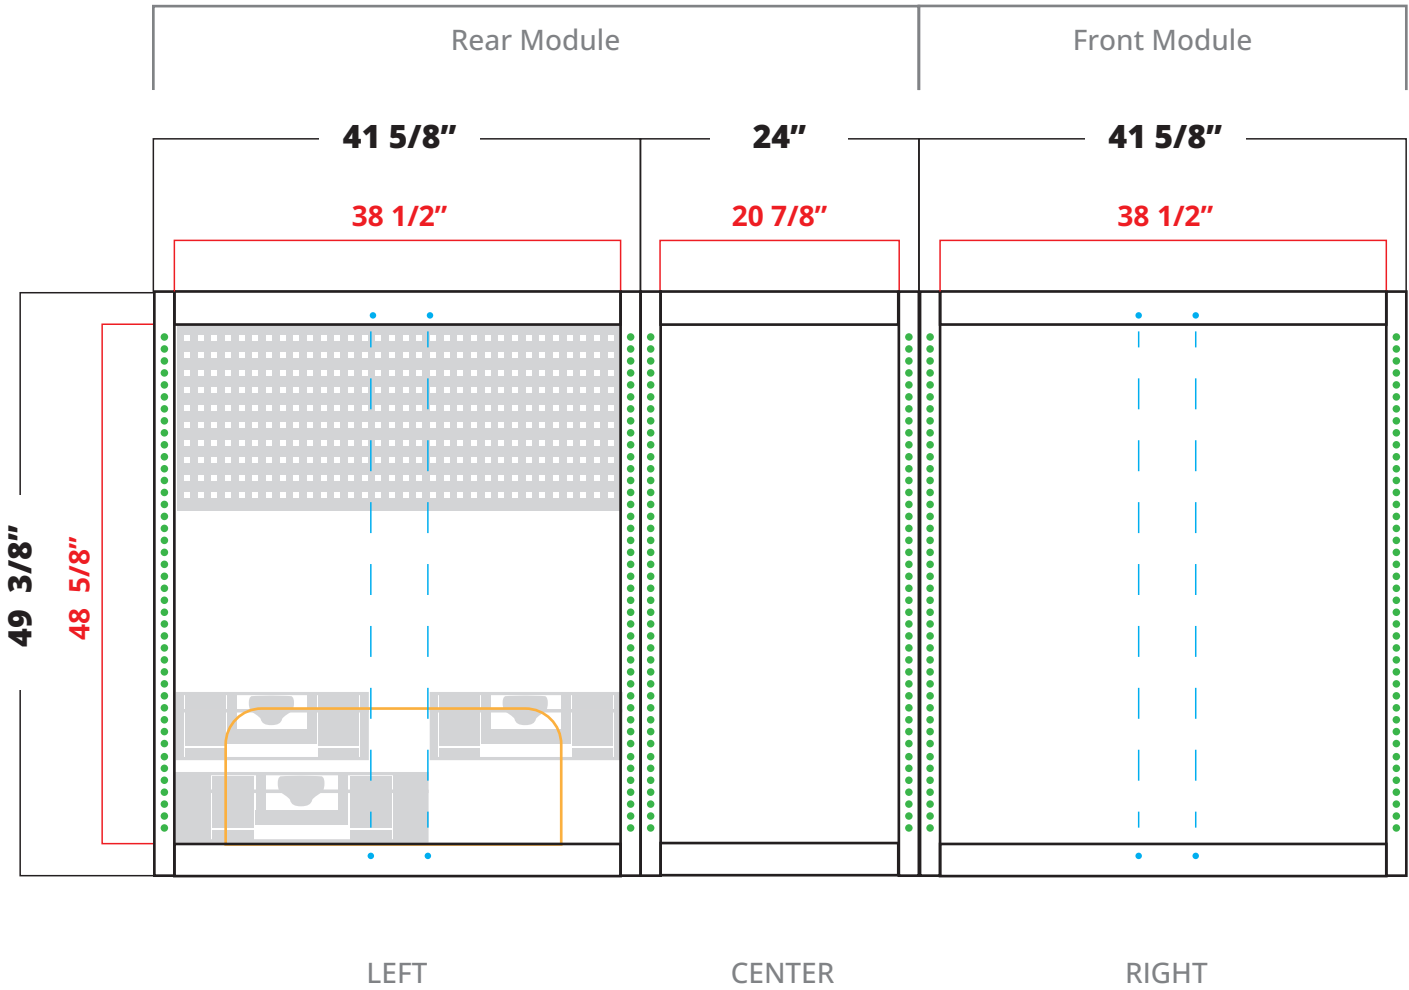

LEFT Frame Fitting Options (3 variations)

- 1. Use the full width of the frame
Fit accessories with 38 1/2" W
- 2. Create 2 sections within the frame
Add (1) Divider to fit:
(1) L section 20 7/8" W
(1) M section 16 1/2" W
- 3. Create 2 sections within the frame
Add (2) Dividers to fit:
(2) M sections 16 1/2" W

CENTER Frame Fitting

- 1. Use the full width of the frame
Fits L size accessories 20 7/8" W

RIGHT Frame Fitting Options (3 variations)

- 1. Use the full width of the frame
Fit accessories with 38 1/2" W
- 2. Create 2 sections within the frame
Add (1) Divider to fit:
(1) L section 20 7/8" W
(1) M section 16 1/2" W
- 3. Create 2 sections within the frame
Add (2) Dividers to fit:
(2) M sections 16 1/2" W



Explore more on how to create your own layout with different frames, shelves, boxes and accessories by viewing the Van Guide.
bottsmartvan.com/van-shelving -- or Scan the QR Code

Call or email us to place your custom order. sales@bottsmartvan.com 1 (765) 535 7540



Hole Allocations: 57 holes for 59" tall frames and 42 holes for a 44" tall frame
(2 additional forward facing holes for anchor points)

functional area

frame divider

hole allocation

wheel base (shallow depth)

Rear door

Rear Module

41 5/8"

24"

38 1/2"


20 7/8"

49 3/8"

48 5/8"

LEFT

CENTER

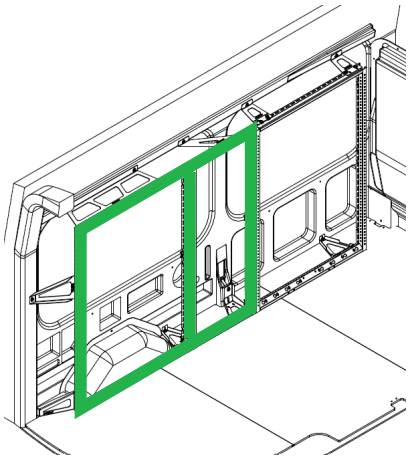

LEFT Frame Fitting Options (3 variations)

- 1. Use the full width of the frame
Fits accessories 38 1/2" W
- 2. Create 2 sections within the frame
Add (1) Divider to fit:
(1) L section 20 7/8" W
(1) M section 16 1/2" W
- 3. Create 2 sections within the frame
Add (2) Divider to fit:
(2) M section 16 1/2" W

CENTER Frame Fitting

Use the full width of the frame
Fits L size accessories 20 7/8" W


functional area

frame divider


hole allocation

wheel base (shallow depth)

Hole Allocations: 57 holes for 59" tall frames and 42 holes for a 44" tall frame
(2 additional forward facing holes for anchor points)

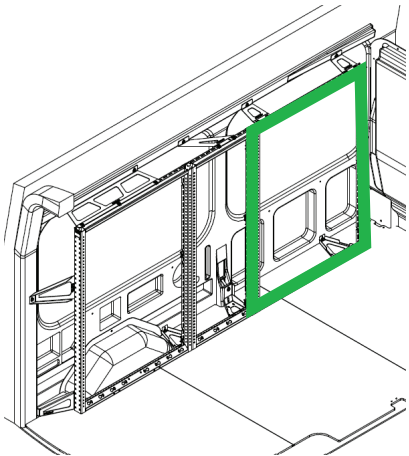


Rear door

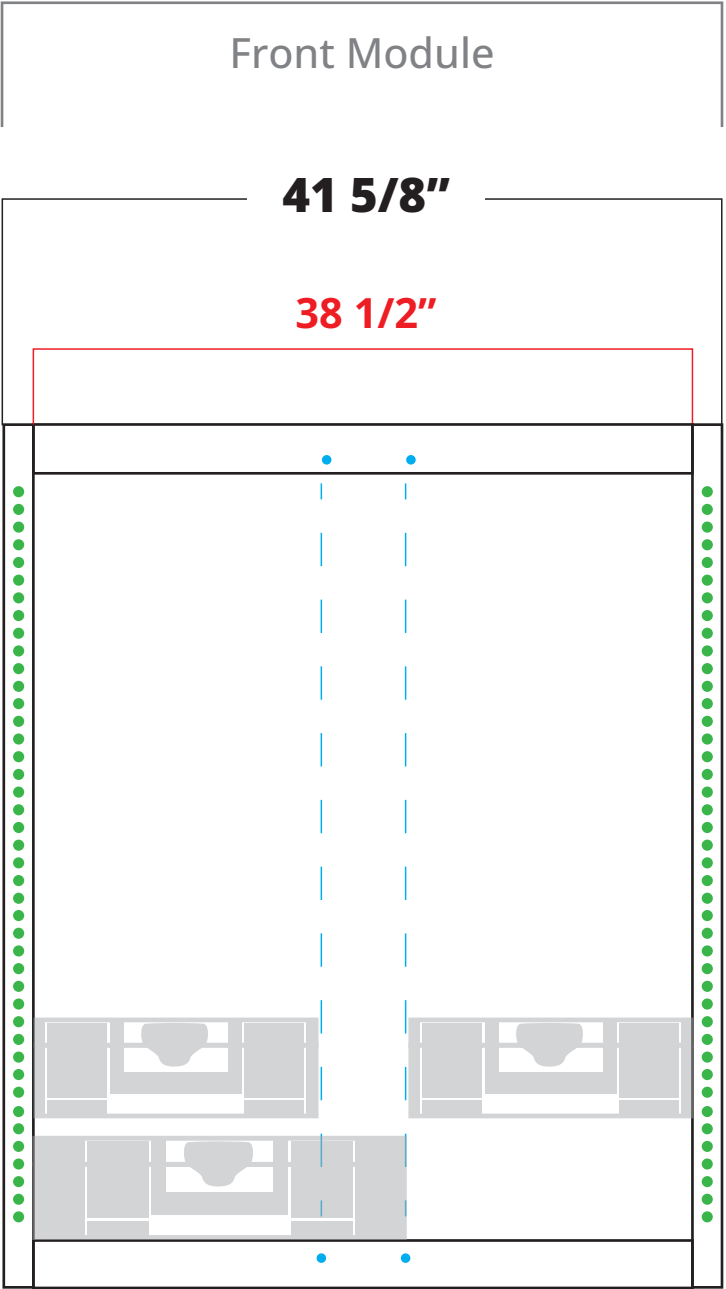

RIGHT


RIGHT Frame Fitting Options (3 variations)

1. Use the full width of the frame
Fits accessories 38 1/2" W
2. Create 2 sections within the frame
Add (1) Divider to fit:
(1) L section 20 7/8" W
(1) M section 16 1/2" W
3. Create 2 sections within the frame
Add (2) Divider to fit:
(2) M section 16 1/2" W

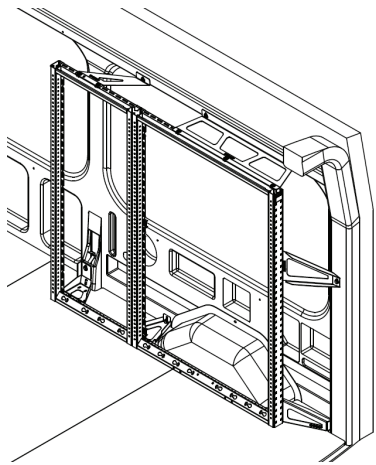

Hole Allocations: 57 holes for 59" tall frames and 42 holes for a 44" tall frame
(2 additional forward facing holes for anchor points)

Important note:
The frames are fixed and cannot be changed.

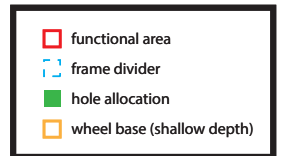


Rear door →

LEFT Frame Fitting

- 1. Use the full width of the frame
Fits L size accessories 20 7/8" W

RIGHT Frame Fitting Options (3 variations)


- 1. Use the full width of the frame
Fit accessories with 38 1/2" W
- 2. Create 2 sections within the frame
Add (1) Divider to fit:
(1) L section 20 7/8" W
(1) M section 16 1/2" W
- 3. Create 2 sections within the frame
Add (2) Dividers to fit:
(2) M sections 16 1/2" W

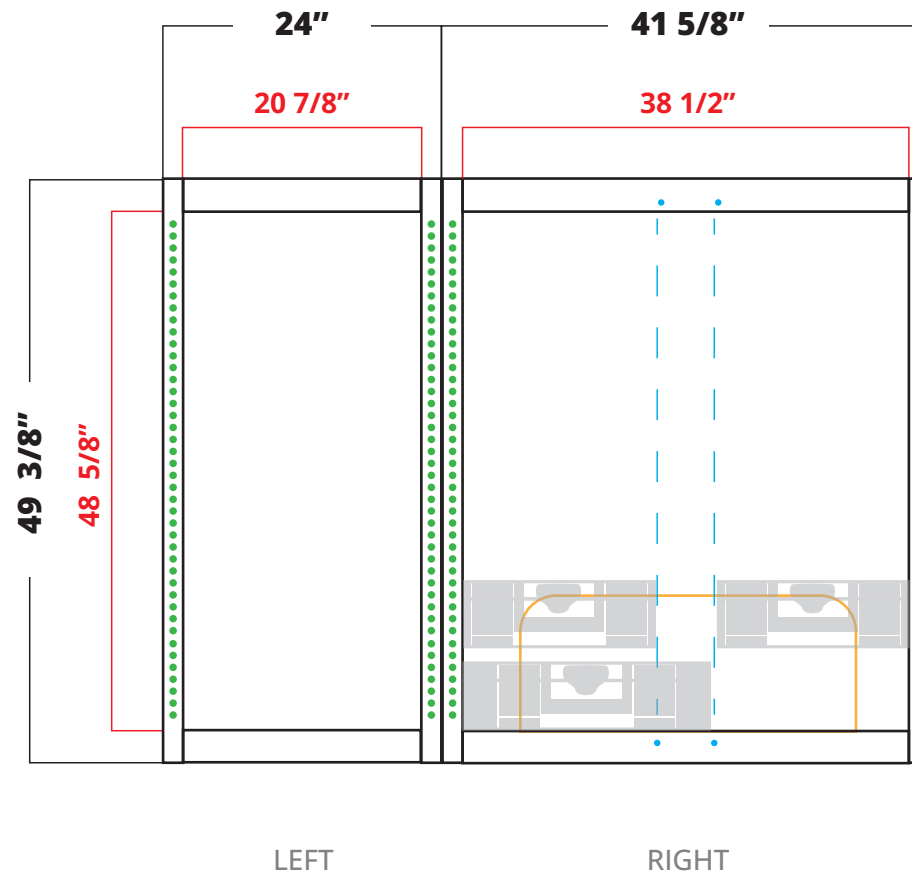

Explore more on how to create your own layout with different frames, shelves, boxes and accessories by viewing the Van Guide.
bottsmartvan.com/van-shelving -- or Scan the QR Code

Call or email us to place your custom order. sales@bottsmartvan.com 1 (765) 535 7540



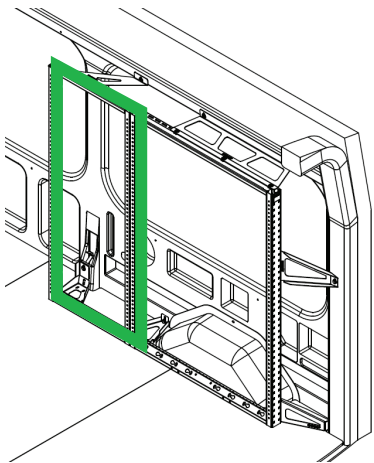

Hole Allocations: 57 holes for 59" tall frames and 42 holes for a 44" tall frame
(2 additional forward facing holes for anchor points)

functional area

frame divider

hole allocation

wheel base (shallow depth)


Rear door



LEFT



Frame Fitting Options (3 variations)

Use the full width of the frame
Fits L size accessories 20 7/8" W

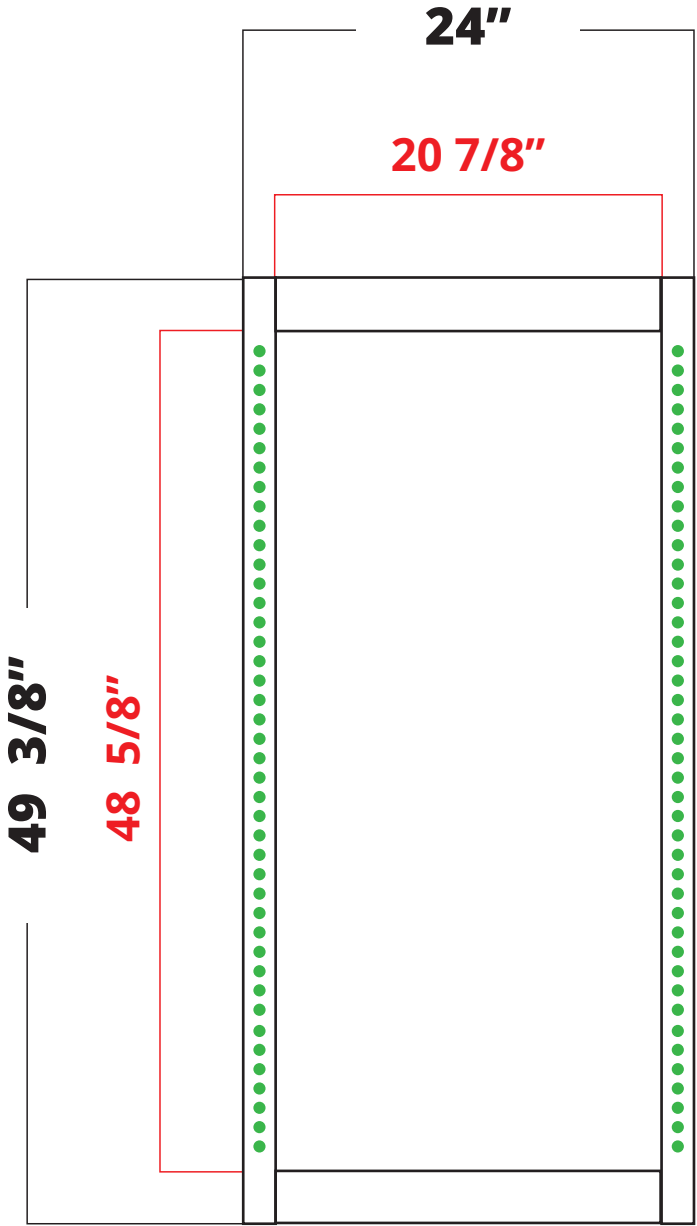

LEFT

Hole Allocations: 57 holes for 59" tall frames and 42 holes for a 44" tall frame
(2 additional forward facing holes for anchor points)

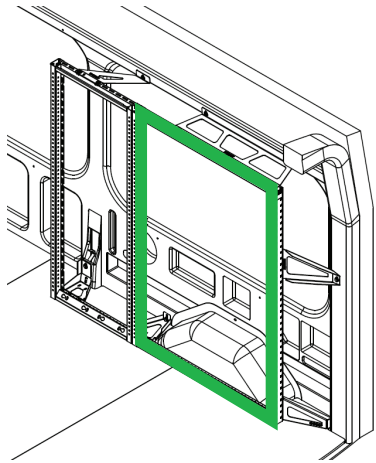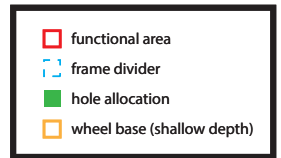

Rear door →

RIGHT Frame Fitting Options (3 variations)

1. Use the full width of the frame
Fits accessories 38 1/2" W
2. Create 2 sections within the frame
Add (1) Divider to fit:
(1) L section 20 7/8" W
(1) M section 16 1/2" W
3. Create 2 sections within the frame
Add (2) Divider to fit:
(2) M section 16 1/2" W

